


STEP 1: BRACKETS AND MOUNTING


Both a Control-end bracket and a Pin-end bracket have been provided and allow you versatility in mounting depending on your application. You have the option to either affix to the face of a surface or affix to a ceiling or undersurface recess. Mount the brackets where applicable using the measurements provided to assure the roller blind fits securely.

(Top Front configuration shown)

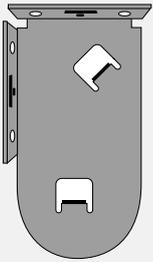


Control-end bracket


(Top Front configuration shown)

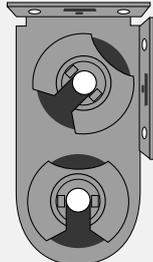

Pin-end bracket

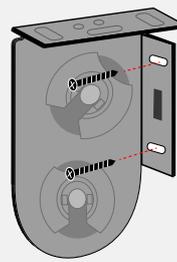

Face-fix

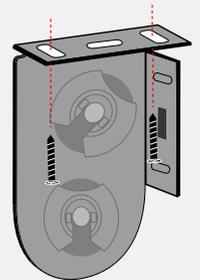


Top-fix

STEP 2: FITTING THE BLIND

Fit your new blind first. To start the process place the spring-loaded pin into the lower circular hold on the bracket. Move the blind toward the bracket so the spring-loaded pin flattens.

Keeping the pin flat, lift the sidewinder end of the blind higher so the blind is level and the chain is hanging directly down from the bottom of the sidewinder. Place the legs of the control into the cross section of the bracket.

Repeat the process for additional blinds.

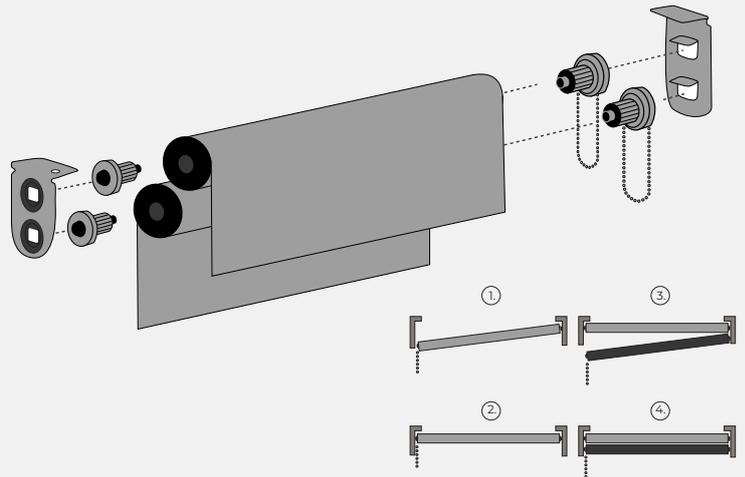

STEP 3: CHILD SAFETY INSTALLATION

An approved child-safety device is provided with all of our blinds. This device must be fixed to prevent any risk of accidental strangulation. The device is designed to ensure that the operating cords cannot create a loop equal to or greater than 220mm and to be placed less than 1600mm from the floor. To install please follow the below instructions:

- A.** Position the device against the wall and mark the point of the screw-holes with a pencil.
- B.** The cord must be taut. Please ensure the device is less than 1600mm from the floor level and a loop no more than 220mm in length can be made.
- C.** Fix the cord securely to the wall using the components provided.
- D.** If installed correctly with the cord taut, the cord will not be able to be dislodged without removing the approved device from the wall.

